

# SINGLE SHEET INSTALLATION INSTRUCTIONS

Please note: If you have recently painted your wall you will have to wait 4-6 weeks for the paint to fully cure.

# Option B: Vertical Hinge




### Step 4B: Select your hinge!

Option B: The vertical hinge

If you have a large graphic that is over a metre or has a very complex design with small elements this is the method for you. Also, this method is perfect for those who feel less confident with installation.



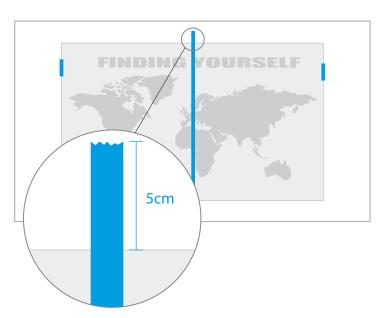


## Step 5B: Preparing graphic

Whilst your graphic is still on the wall from 'the dummy run', take a long strip of masking tape and apply it vertically through the middle. Allow at least 5cm of tape to be applied above and below the sticker; you may find it necessary to use two layers of masking tape to support the graphic.





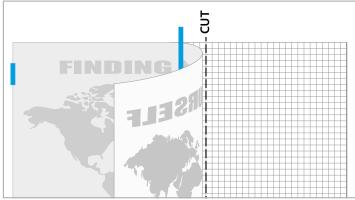

# Step 6B: Sticking the graphic (part 1)

Starting with the right hand side, fold the graphic over the hinge and peel off the backing paper till it meets the masking tape. Whilst keeping the graphic folded back, cut away the backing paper with a pair of scissors. Position the right hand side back keeping it under tension on both corners.
























# SINGLE SHEET INSTALLATION INSTRUCTIONS

Please note: If you have recently painted your wall you will have to wait 4-6 weeks for the paint to fully cure.

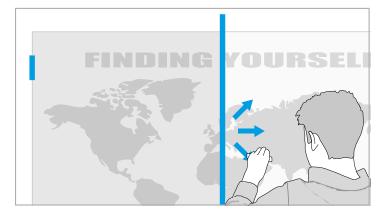


### Step 7B: Sticking the graphic (part 2)

With one hand, hold the graphic at an angle to the wall, with your other hand, use your squeegee to apply pressure from the middle pushing towards an edge. Remove the masking tape hinge and repeat the same process on the left hand side.





### The Big Reveal: Options A and B

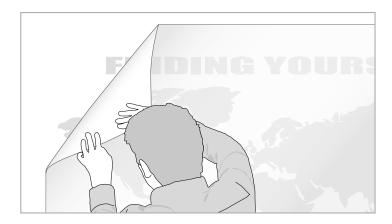

#### Step 8:

Now that you have applied your graphic, carefully remove the application tape by taking one of the top corners and start peeling it away sliding it back across the wall. Do this slowly so that if any little sections remain stuck to the application tape you can push them back onto the wall.





Small amounts of bubbling may occur after the graphic is on the wall. If this happens all you need to do is pop them with a small pin and smooth the area with a finger.

Woo hoo, you now have a completed work of art!

At Vinyl Impression we love to see pictures of all our customers' handy work and ask if you could share your snaps with us.





















