

# E1076 30AMP BATTERY CHARGER 24V – 12V (26V Turn On)

24V TO 12V BATTERY CHARGER 30AMP *Charge a 12V Battery from a 24V Battery System*  
HIGH SPECIFICATION  
MANUFACTURED IN THE UK

This Battery Charger starts when the voltage reaches approximately 26V.

This Unit has a Brown Control Wire connection which is wired directly to the +ve Connection of the 24V Cranking (Donor) Battery. The Brown Control Wire senses the 24V Cranking (Donor) Battery Voltage and switches the Battery Charger on only when the 24V Cranking (Donor) Battery is being charged.

Unlike Relay or Diode Chargers this Unit automatically controls the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged and prevents the 24V Cranking Battery (Donor Battery) from becoming flat / exhausted



FRONT VIEW

REAR VIEW


- PART NO: E1076
- TYPE: SWITCH MODE STEP DOWN BATTERY CHARGER
- CHARGING CURRENT: 30 AMP
- INPUT VOLTAGE: 18 to 30V DC
- OUTPUT VOLTAGE: 14V DC
- CONTROL INPUT VOLTAGE (CVIN): CHARGER ENABLED: >26.5V DC / CHARGER DISABLED: < 25V DC
- OVERLOAD PROTECTION: YES
- POLARITY PROTECTED: EXTERNAL FUSE
- HIGH TEMP PROTECTED: YES
- SHORT CIRCUIT PROTECTION: YES
- EFFICIENCY: > 90%
- DIMENSIONS: 215mm X 100mm X 75mm
- FIXING CENTRES: 70mm X 200mm
- HOLE SIZE: 4.5mm
- WEIGHT: 1150g
- CONSTRUCTION: ANODISED COOLING PROFILE (TWIN)

**OEM AND TRADE ENQUIRIES WELCOME**

MODELS ALSO AVAILABLE: 15A / 45A / 60A / 75A / 90A

## 24V to 12V Battery Charger

*Charge a 12V Battery from a 24V Battery System*

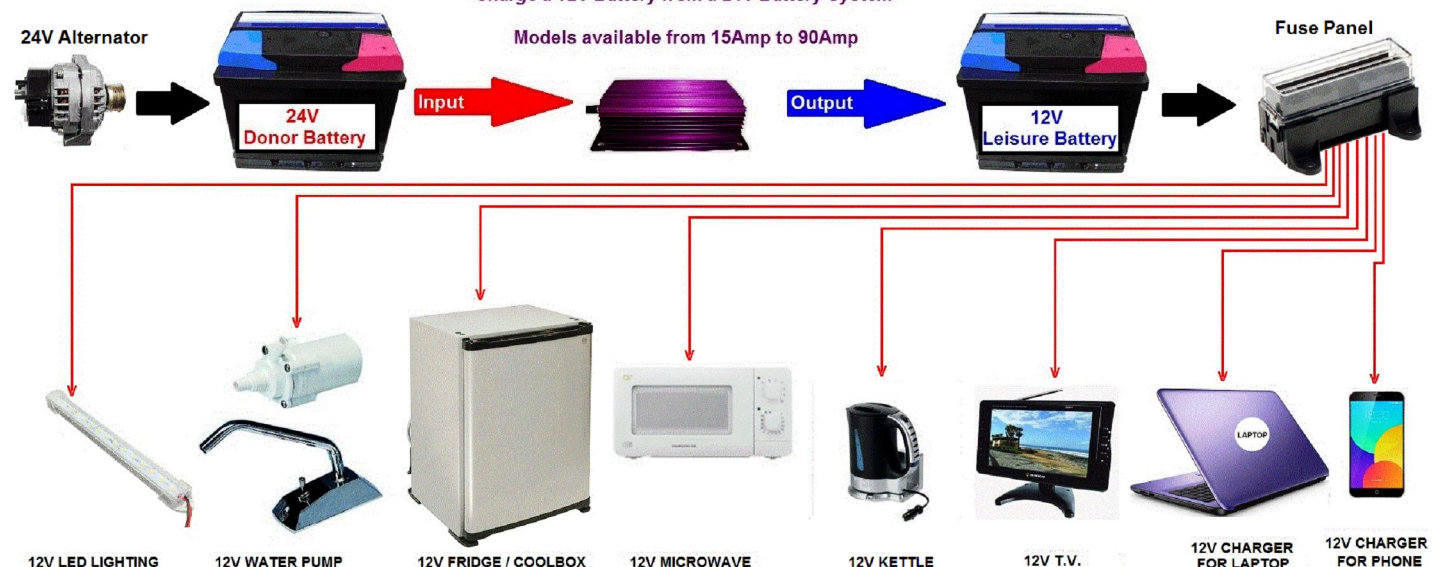

**EURO MANUFACTURING AND MARKETING LIMITED**

Euro Works, 11-13 High Street, Wem, Shropshire SY4 5AA, England.

Tel: +44 (0) 1939 235073

Fax: +44 (0) 1939 235074

Email: [sales@eurogroup-gb.com](mailto:sales@eurogroup-gb.com) OR [sales@battery-management-voltage-converter.com](mailto:sales@battery-management-voltage-converter.com)

Web Site: [www.eurogroup-gb.com](http://www.eurogroup-gb.com) OR [www.battery-management-voltage-converter.com](http://www.battery-management-voltage-converter.com)

### **BEFORE INSTALLATION YOU NEED TO PURCHASE:**

- 1 X 20A AUTOMOTIVE BLADE FUSE (COLOUR: YELLOW)
- 1 X 40A AUTOMOTIVE BLADE FUSE (COLOUR: ORANGE)
- 1 X 1A AUTOMOTIVE BLADE FUSE (COLOUR: BLACK)
- 3 X INLINE FUSE HOLDER (TO TAKE BLADE FUSES)

### **RECOMMENDED MINIMUM CABLES SIZES:**

- INPUT (RED): 6mm<sup>2</sup> CONDUCTOR CROSS SECTION (84/0.3mm)
- OUTPUT (BLUE): 6mm<sup>2</sup> CONDUCTOR CROSS SECTION (84/0.3mm)
- GROUND (BLACK): 6mm<sup>2</sup> CONDUCTOR CROSS SECTION (84/0.3mm)
- CONTROL (BROWN): 1mm<sup>2</sup> CONDUCTOR CROSS SECTION (32/0.2mm)


The Battery Charger can be wired in 2 ways:-

#### **Wired as a fully automatic Battery Charger**

The Brown Control Wire Connection is wired directly to the +ve Connection of the 24V Cranking (Donor) Battery to switch the Charger on and off automatically.

In this case the Control Wire senses the 24V Cranking (Donor) Battery Voltage and switches the Charger on only when the 24V Cranking (Donor) Battery is being charged.

The Unit automatically controls the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged and prevents the 24V Cranking Battery (Donor Battery) from becoming flat / exhausted.

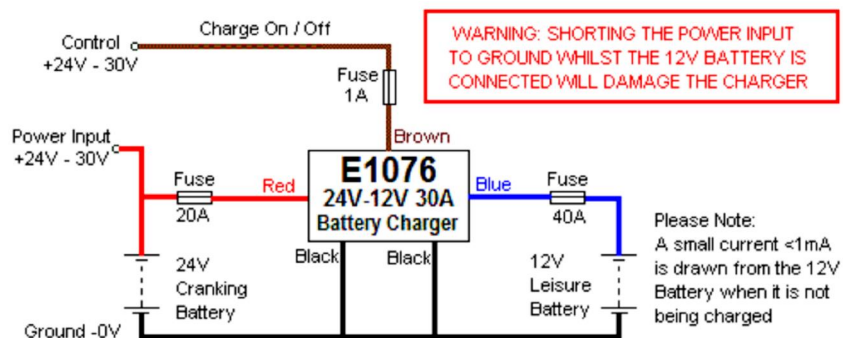


#### **Wired as a manually operated Battery Charger**

The Brown Control Wire Connection is wired via a Switch to the +ve Connection of the 24V Cranking (Donor) Battery to switch the Charger on and off manually.

In this case the Operator can control when the Charger is switched on or off.

If left on, the Unit will automatically control the maximum charge into the 12V Leisure (Recipient) Battery preventing it from becoming over-charged / damaged and prevent the 24V Cranking Battery (Donor Battery) from becoming flat / exhausted.

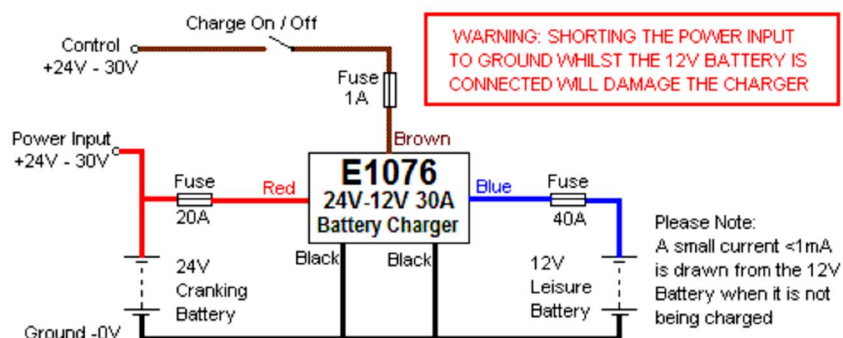

### **INSTALLATION INSTRUCTIONS:**

1. CONNECT THE BLUE OUTPUT CONNECTION TO THE +VE CONNECTION OF THE 12V LEISURE / AUXILIARY BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 40A BLADE FUSE BETWEEN THE 12V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT)
2. CONNECT ONE BLACK CONNECTION TO THE -VE CONNECTION OF THE 12V BATTERY
3. CONNECT ONE BLACK CONNECTION TO GROUND, IE: THE VEHICLE CHASSIS OR TO THE -VE CONNECTION OF THE 24V BATTERY
4. CONNECT THE RED INPUT CONNECTION TO THE +VE CONNECTION OF THE 24V CRANKING BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 20A BLADE FUSE BETWEEN THE 24V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT)
5. CONNECT THE BROWN LEAD CONNECTION TO THE +VE CONNECTION OF THE 24V CRANKING / DONOR BATTERY (FITTING 1 X INLINE FUSE HOLDER WITH 1A BLADE FUSE BETWEEN THE 24V BATTERY AND THE BATTERY CHARGER AS SHOWN ON WIRING DIAGRAM SUPPLIED WITH UNIT). THE BROWN LEAD DETECTS THE VOLTAGE OF THE BATTERY AND WHEN THE BATTERY VOLTAGE FALLS TO 25V DC IT WILL AUTOMATICALLY SWITCH THE BATTERY CHARGER OFF UNTIL THE ALTERNATOR HAS REPLENISHED / TOPPED UP THE CRANKING / DONOR BATTERY, AT WHICH POINT THE BATTERY CHARGER WILL BE AUTOMATICALLY SWITCHED BACK ON.

IF IN DOUBT, PLEASE CONSULT AN AUTOMOTIVE ELECTRICIAN OR TELEPHONE US ON 01939 235073

**EURO MANUFACTURING AND MARKETING LIMITED**

Euro Works, 11-13 High Street, Wem, Shropshire SY4 5AA, England.

Tel: +44 (0) 1939 235073

Fax: +44 (0) 1939 235074

Email: [sales@eurogroup-gb.com](mailto:sales@eurogroup-gb.com) OR [sales@battery-management-voltage-converter.com](mailto:sales@battery-management-voltage-converter.com)

Web Site: [www.eurogroup-gb.com](http://www.eurogroup-gb.com) OR [www.battery-management-voltage-converter.com](http://www.battery-management-voltage-converter.com)